

Flexible cable tube suitable for general wire-in-tube operation of model railway turnouts and semaphore signals.

Recommended Control Wire is 1.00mm diameter polished steel Music Wire (Piano Wire). File the end of the Control Wire smooth before feeding it through the tube to prevent snagging. Apply grease to the wire as you feed it in.

**Always insert the Control Wire before securing the tube.** It is important that the two ends of the tube are securely anchored (e.g. Clamp-wit), but intermediate support is not critical.

This tube is easily cut to the desired length using standard wire cutters.